



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Back		Back
	EPG		Guide
	Lang		Dual
	Info		Info
	Repeat		Shift + Text
	TTX		Text
	S-T		Subt
	Menu		Menu
	Exit		Exit
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	FAV		Pre Ch
	TV/R		TV/R
	List		List
	Goto		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





	Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	FRW			<<
	FFW			>>
	Prev			I<<
	Next			>>I
	Play			Play
	Pause			Pause
	Stop			Stop
	Rec			Rec
	Red / OPT			Red
	Green / RES			Green
	Yellow / ASP			Yellow
	Blue / Timer			Blue
	Blue / Timer			AV

