


 



 
 


 










 








 






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	TV / AV		AV
	Red / I/II		Red
	Red / I/II		Dual
	Left / Vol-		Vol -

**Originalfernbedienung Ersatzfernbedienung**

	Green / Sleep		Green
	Green / Sleep		Sleep
	Yellow / Q.View		Yellow
	Blue / List		Blue
	Blue / List		List
	Up / PR+		Up
	Up / PR+		Ch +
	Down / PR-		Down
	Down / PR-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	OK		Ok
	PSM		Format
	SSM		Shift + Dual
	PC/*		Smart
	ARC/*		Media





**Originalfernbedienung**    **Ersatzfernbedienung**

	Text		Text
	Size		Eject
	Hold		Stop
	Index		Info
	Update		Play
	Time		Shift + AV
	Reveal		Pause
	Mix		Shift + Text

**Originalfernbedienung**    **Ersatzfernbedienung**