 



 


 

 
 

 
 
 
 









 

 









 
 
 
 

 
 
 
 
 


 

 
 
 







Originalfernbedienung    Ersatzfernbedienung

	POWER		Power
	MUTE		Mute
	P. MODE		Media
	S. MODE	 + 	Shift + Dual
	SLEEP		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	RECALL		Back

Originalfernbedienung    Ersatzfernbedienung

	INPUT		AV
	ASPECT		Format
	UP		Up
	LEFT		Left
	OK		Ok
	RIGHT		Right
	DOWN		Down
	MENU		Menu
	PC AUTO		TV/R
	EXIT		Exit
	VOL+		Vol +
	VOL-		Vol -
	AUDIO		Dual
	CH+		Ch +
	CH-		Ch -
	TEXT		Text
	HOLD		Stop





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	INDEX		Info				
	SIZE		Eject				
	REVEAL		Options				
	SUBPAGE		Subt				
	RED		Red				
	GREEN		Green				
	YELLOW		Yellow				
	BLUE		Blue				

