









 
 












 

 





 
 


 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	i		Info
	Volume+		Vol +
	Volume-		Vol -
	Channel+		Ch +

Originalfernbedienung Ersatzfernbedienung

	Channel-		Ch -
	Up		Up
	Left		Left
	OK / List		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Guide		Guide
	Record List		List
	Exit		Exit
	Red / F1		Red
	Green / F2		Green
	Yellow / F3		Yellow
	Blue / F4		Blue
	Option		Options
	Subtitle		Subt
	Text		Text





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Audio		Dual				
	VF		Format				
	AR		3D				
	⏻		Sleep				
	TV / Radio		TV/R				
	Rec		Rec				
	Stop		Stop				
	SAT		Media				
	M		Smart				
	<<		<<				
	Pause		Pause				
	Play		Play				
	>>		>>				
	I<		I<<				
	>I		>>I				
	I>	 + 	Shift + Play				
	>I<	 + 	Shift + Stop				

