



 

 

 

 


 















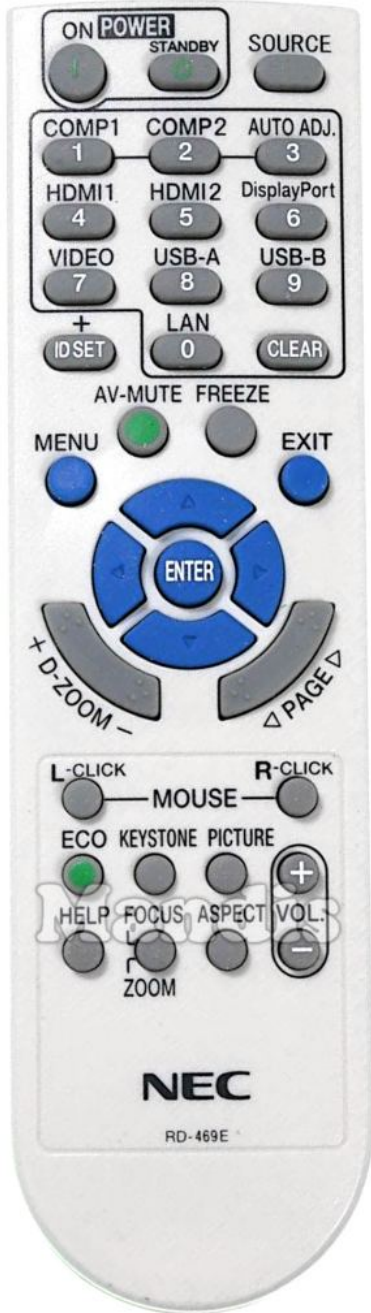 
Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Standby		Shift + Power
	Source		AV / Input / RDS
	1/Comp1		1
	2/Comp2		2
	3/Auto Adj.		3
	4/HDMI1		4
	5/HDMI2		5
	6/Display Port		6
	7/Video		7
	8/USB-A		8
	9/USB-B		9
	ID Set/+		Guide / EPG / -/--
	0/LAN		0
	Clear		Shift + Exit / Cancel / Clear
	Clear		Fav / Marker / PC
	AV-Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	Freeze		Pause / Step / Freeze
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	D-Zoom+		>> / Tune+
	Down		Down
	Page+		CH+ / Page+
	D-Zoom-		<< / Tune-
	Page-		CH- / Page-
	Mouse L-Click		Smart / List
	Mouse R-Click		Display / Media
	Eco		D.Menu / Top
	Keystone		Setup / OPT /
	Picture		Picture / Format





Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Help		Info / Angle
	Focus/Zoom		Zoom / Size
	Aspect		Shift + Picture / Format
	Vol-		Vol-

Originalfernbedienung Ersatzfernbedienung

