



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Display / Media
	Guide		Guide / EPG / -/--
	Source		AV / Input / RDS
	Wide		Picture / Format
	MPX		Setup / OPT /
	Menu		Menu / Home
	Up		Up
	Back / Cancel		Back / Return
	Back / Cancel		Exit / Cancel / Clear
	Left / <<		Left
	Left / <<		<< / Tune-
	OK		OK
	Right / >>		Right
	Right / >>		>> / Tune+
	Mute		Mute / Dimmer
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	FAV		Fav / Marker / PC
	Vol+		Vol+
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Teletext		Text / Goto
	0		0
	Subtitle		Subtitle / EQ



