




















 

 







 



 

 

 













 

 





 

 

 




Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	Audio		Dual
	P.M.		Smart

Originalfernbedienung    Ersatzfernbedienung

	Info		Info
	Input		AV
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+ / Enter		Right
	Left / Vol-		Left
	Left / Vol-		Vol -
	Right / Vol+ / Enter		Vol +
	Right / Vol+ / Enter		Ok
	Menu		Menu
	Page+		>>
	Page-		<<
	Display		Shift + Info
	Exit		Exit
	Red		Red





**Originalfernbedienung    Ersatzfernbedienung**

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Size		Eject
	Stop		Stop
	Reveal		TV/R
	Index		Options
	4:3 / 16:9		Format
	C.Lock		Media
	Sub.PG		Subt
	On/Mix/Off		Text

**Originalfernbedienung    Ersatzfernbedienung**