



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Source		AV
	Radio / Angle		TV/R
	List/USB		List
	EPG/+10		Guide
	Still		Pause
	Aspect		Format
	OO/I/II Audio		Dual
	FAV+/Prog		Smart
	FAV-/Repeat		Media
	Info		Info
	Sleep		Sleep
	PIC		Shift + Format
	Sound		Shift + Dual
	Menu		Menu
	Exit		Exit

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	CH-		Ch -
	CH+		Ch +
	Vol-		Vol -
	Vol+		Vol +
	Recall		Back
	Text/Left arrow		Text
	Text/Left arrow		Left arrow
	Mix/Right arrow		Shift + Text
	Mix/Right arrow		Right arrow
	[=o]/Subtitles		Subt
	Index / Play		Play
	Hold/Left arrow		Left arrow



