
 
 


 

 

 

 



 

 

 


 

 






 

 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Exit
Stop	 Stop	Menu Down	 Down
Slow Up	 Ch +	Top Menu	 D. Menu
Auto/Track	 Smart	Progr.	 Back
Rep/A-B	 +  Shift + Text	Volume+	 Vol +
Subt.	 Subt	Next	 >>
Title	 List	Volume-	 Vol -
Repeat/1/All	 Text	Prev.	 <<
Pause	 Pause	1	 1
Zoom	 Eject	2	 2
Display	 Info	3	 3
DVD/TV	 AV	4	 4
Menu	 Menu	5	 5
Menu Up	 Up	6	 6
Menu Left	 Left	7	 7



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8		8	
Random		3D	
Lang		Dual	
Shuffle		TV/R	
9		9	
+10		Guide	
Np		Media	
Audio	 + 	Shift + Dual	
0		0	
Karaoke/Step	 + 	Shift + Pause	
Record		Rec	
Resume	 + 	Shift + Play	
Rewind		<<	
F.Forward		>>	
Angle		Format	
Play		Play	
C/CH		Pre Ch	
Mark	 + 	Shift + 7	
Digest	 + 	Shift + Guide	

