



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|-------------------|
|  | Mute |  | Mute / Dimmer |
|  | ATV/DTV |  | Eject / Surround |
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | CH+ |  | CH+ / Page+ |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | CH- |  | CH- / Page- |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Vol+ |  | Vol+ |
|  | Guide |  | Guide / EPG / -/- |
|  | 0 |  | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------|
|  | Sleep |  | Sleep / Timer |
|  | Vol- |  | Vol- |
|  | Text |  | Text / Goto |
|  | Text Subpage |  | Setup / OPT / |
|  | CH. List |  | Smart / List |
|  | Subtitle |  | Subtitle / EQ |
|  | I-II |  | Audio / Lang I/II |
|  | P.Size |  | Zoom / Size |
|  | P.Mode |  | Picture / Format |
|  | Exit |  | Exit / Cancel / Clear |
|  | Up |  | Up |
|  | Menu |  | Menu / Home |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Info |  | Info / Angle |
|  | Down |  | Down |



