








 








 


 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|-------|
|  | Power |  | Power |
|  | Home |  | Smart |
|  | Home |  | Menu |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Goto |  | Guide |
|  | Mute |  | Mute |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-----------------|
|  | Setup |  | D. Menu |
|  | Setup |  +  | Shift + Options |
|  | Rec |  | Rec |
|  | Option |  | Options |
|  | Timer |  | Sleep |
|  | Timer |  +  | Shift + AV |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Browser |  | Media |
|  | Return |  | Back |
|  | Display |  | Info |
|  | Audio |  | Dual |
|  | Subtitle |  | Subt |
|  | F1 |  +  | Shift + 1 |



