



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	3D		3D / Invert
	Source		Source
	Ratio		Blank / Mute
	Mode		Mode
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter/Play/Pause		Enter
	Stop/Back		Shift + Power
	Menu		Menu
	1/Freeze		Freeze / Timer
	2/VGA		Auto
	3/HDMI/MHL		Volt / Focus
	4/PgUp		Vol + / Page +
	5/Component		Shift + Comp / Video

Originalfernbedienung Ersatzfernbedienung

	6/Video		Comp / Video
	7/PgDn		Vol - / Page -
	8/Media		Eco / Aspect
	9/LAN/WIFI		Help / Info
	0/Hide		Shift + 3D /
	Zoom In		+ / Play
	Zoom Out		- / Stop

