



 
 

 
 

 
 

 

 










 

 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Device		AV / Input / RDS
	Backlight		Sleep / Timer
	Mute		Mute / Dimmer
	Rotate		D.Menu / Top
	Copy		Sound / Title
	Edit		Picture / Format
	Repeat		Shift + Green / APP /
	Subtitle		Subtitle / EQ
	Audio Track		Audio / Lang I/II
	BGM		Eject / Surround
	Zoom		Zoom / Size
	Random		Shift + Blue / Prime
	Digest		TV/Radio /
	Slideshow		Smart / List
	Home		Menu / Home
	Return		Back / Return






 
Originalfernbedienung Ersatzfernbedienung

	Setup		Setup / OPT /
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Goto		Text / Goto
	Down		Down
	Info		Info / Angle
	<< Skip		<< / Tune-
	Skip >>		>> / Tune+
	Prev		I<< / Preset-
	Next		>>I / Preset+
	Full Screen		Fav / Marker / PC
	Mode Video		Display / Media
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold

 

 

 





Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	+10		Guide / EPG / -/--
	4		4
	5		5
	6		6
	0		0
	7		7
	8		8
	9		9
	Repeat Mode		Shift + Yellow / YouTube /
	Page Down		CH- / Page-
	Page Up		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	Movie		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Music		Green / APP / Repeat
	Photo		Yellow / YouTube / Repeat
	File		Blue / Prime Video / Random

