




 













 












 



 

 

 


















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Smart		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	Guide		Guide / EPG / -/--
	Netflix		Shift + Red / Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	Google Play		Display / Media

Originalfernbedienung Ersatzfernbedienung

	prime video		Shift + Blue / Prime
	Home		Shift + Menu /
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	Source		AV / Input / RDS
	CH-		CH- / Page-
	Red		Red / Netflix / Search



