







 

 





 

 

 



 
 


 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Rad		TV/Radio /
	Mute		Mute / Dimmer
	Text		Text / Goto
	[...]/Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	[+]/Mosaic		D.Menu / Top
	Sleep		Sleep / Timer
	II/Freeze		Shift + Pause / Step /
	Zoom		Zoom / Size
	Guide		Guide / EPG / -/-
	i/Info		Info / Angle
	Recall		Back / Return
	Group		Display / Media
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	CH+		CH+ / Page+
	Up		Up
	↑		Shift + CH+ /
	Vol-		Vol-
	OK		OK
	Right		Right
	↓		Shift + CH- /
	CH-		CH- / Page-
	Down		Down
	File List		Smart / List
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	→		>> / Preset+



