





 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/VCR		TV/R
	AV		AV
	<<		<<
	>>		>>
	I<<		I<<

Originalfernbedienung Ersatzfernbedienung

	>>I		>>I
	Pause/Step		Pause
	Play		Play
	Stop		Stop
	Up		Up
	PR/TRK+		Ch +
	PR/TRK-		Ch -
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	Display/CLK/CN		3D
	i/Setup		Info
	Disc Menu		D. Menu
	Return		Back
	O)/Audio		Dual
	[...]/Subtitle		Subt












**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/VCR		TV/R
	AV		AV
	<<		<<
	>>		>>
	I<<		I<<

**Originalfernbedienung    Ersatzfernbedienung**

	>>I		>>I
	Pause/Step		Pause
	Play		Play
	Stop		Stop
	Display/CLK/CN		3D
	i/Setup		Info
	Disc Menu		D. Menu
	Return		Back
	Up		Up
	PR/TRK+		Ch +
	PR/TRK-		Ch -
	Down		Down
	Right		Right
	Left		Left
	OK/Enter		Ok
	O)/Audio		Dual
	[...]/Subtitle		Subt



