
 
 

 


 

 



 





 
 

 


 
 

 

 





 





 

 





 
 

 
 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Internet Radio		Shift + 1
	Online Music		Shift + 2
	Music Server		Shift + 3
	Optical		Shift + 4
	Coaxial		Shift + 5
	Analog		Shift + 6
	Bluetooth		Shift + 7
	iPod/USB		Shift + 8
	I<<		I<<
	Play		Play
	Pause		Pause
	>>I		>>I
	CH+		Ch +
	CH-		Ch -
	ADD Favorites		3D

Originalfernbedienung Ersatzfernbedienung

	CALL Favorites		Pre Ch
	Tone		Smart
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Top Menu		Menu
	Info		Info
	Search		TV/R
	Setup		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	1		1
	2		2
	3		3





Originalfernbedienung Ersatzfernbedienung

4 GHI	4	4	4
5 JKL	5	5	5
6 MNO	6	6	6
7 PQRS	7	7	7
8 TUV	8	8	8
9 WXYZ	9	9	9
0 .*	0	0	0
+10 d/A	+10	GUIDE	Guide
CLEAR	Clear	CLEAR EXIT	Exit
RANDOM	Random	APP MEDIA	Media
REPEAT	Repeat	REPEAT TEXT	Text
MODE	Mode	PICTURE FORMAT	Format
DIMMER	Dimmer	AD SUBT	Subt

Originalfernbedienung Ersatzfernbedienung

