



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Operate (AC Only)	 Power		
 Function	 Menu		
 Band	 TV/R		
 Play/Pause	 Play		
 Play	 Yellow		
 Pause	 Pause		
 >>I/Preset+	 >>I		
 >>/Tune+	 >>		
 I<</Preset-	 I<<		
 <</Tune-	 <<		
 Stop	 Stop		
 Vol+	 Vol +		
 Vol-	 Vol -		

