
 
 



 

 

 
 




 


 





 
 

 

 


 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Epg	 +  Shift + Guide	Exit	 Exit
Subt.List	 Subt	Menu Down	 Down
Opt?	 Options	Back	 Back
App	 Media	Volume+	 Vol +
Info	 +  Shift + Info	CH/Page+	 Ch +
Sleep Timer	 Sleep	Audio	 Dual
TV	 TV/R	Volume-	 Vol -
Video	 D. Menu	CH/Page-	 Ch -
Text	 Text	1. ?	 1
Zoom	 Eject	2abc	 2
TV/SAT	 AV	3def	 3
Menu	 Menu	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Info	6mno	 6
Menu Left	 Left	7pqrm	 7



