



































**Originalfernbedienung Ersatzfernbedienung**











PWR On/Off		Power
Mute		Mute / Dimmer
App		Shift + Green / APP /
Info		Info / Angle
Subt.List		Subtitle / EQ
TV		TV/Radio /
Video		Shift + 4
Text		Text / Goto
Zoom		Zoom / Size
Menu		Menu / Home
TV/SAT		AV / Input / RDS
Menu Up		Up
Display		Display / Media
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear

**Originalfernbedienung Ersatzfernbedienung**

Menu Down		Down
Back		Back / Return
Volume+		Vol+
CH/Page+		CH+ / Page+
Volume-		Vol-
Audio		Audio / Lang I/II
CH/Page-		CH- / Page-
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide / EPG / -/-



Originalfernbedienung Ersatzfernbedienung

0/10		0
FAV Pref.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Dec/Pause		Pause / Step / Freeze
SAT Sky		Smart / List
		>>  / Preset+
		<< / Preset-

Originalfernbedienung Ersatzfernbedienung