
 

 
 




 



 


 







 

 
 
 









Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Audio Off		Mute	
Slow Down		Ch -	
Stop		Stop	
Slow Up		Ch +	
Pause		Pause	
Subt.		Subt	
Auto/Track		Smart	
Rep/A-B	 + 	Shift + Text	
Title		List	
Repeat/1/All		Text	
DVD/TV		AV	
Zoom	 + 	Shift + Eject	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Return		Back	
Menu Down		Down	
Volume+		Vol +	
Progr.		Sleep	
Next		>>	
Volume-		Vol -	
Prev.		<<	
Top Menu		D. Menu	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
Mark	 + 	Shift + Ok	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Angle	 Format	0	 0
EQ	 3D	C/CH	 Pre Ch
Audio	 +  Shift + Dual		
7	 7		
F.Forward	 >>		
Clear/00:00	 Exit		
Lang	 Dual		
8	 8		
Video	 Media		
9	 9		
+10	 Guide		
Play	 Play		
Setup	 Options		
Search	 TV/R		
Rewind	 <<		
Open/Close	 Eject		
Record	 Rec		

