 
 
 
 
 
 

 

 


 
 
 

 
 
 
 
 
 
 
 

 

 

 


 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	HDMI		Red
	Input Select		AV
	Prog. +		Ch +
	Prog. -		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit

Originalfernbedienung Ersatzfernbedienung

	Zoom		Shift + Eject
	Audio		Dual
	Repeat		Text
	Disc Menu		D. Menu
	Top Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display		Info
	Return		Back
	Variable Replay		Smart
	Variable Skip		Shift + Smart
	1.3x / 0.8x Play		Shift + Play
	Time Slip		Pre Ch
	<<		<<



