







 

 



































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject / Surround
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	OSD / Info		Display / Media
	OSD / Info		Info / Angle
	4		4
	5		5
	6		6
	V-Mode		Picture / Format
	7		7
	8		8
	9		9
	P/N / Fav		Fav / Marker / PC
	0		0

Originalfernbedienung Ersatzfernbedienung

	10+		Shift + Guide / EPG / -/-
	Goto		Shift + Text /
	Setup		Setup / OPT /
	Angle		Shift + Info / Angle
	Text / Title		Sound / Title
	Text / Title		Text / Goto
	Subtitle		Subtitle / EQ
	Menu		Menu / Home
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	PBC / EPG		Guide / EPG / -/-
	Source		AV / Input / RDS
	Exit		Exit / Cancel / Clear
	<<		<< / Tune-



