



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Timer		AV
	Clear		Exit
	Display		Info
	Volume+		Vol +
	Volume-		Vol -
	Up		Up
	Left / I<< / <<		Left
	Left / I<< / <<		<<
	Left / I<< / <<		I<<
	Play / Pause		Ok
	Play / Pause		Play
	Play / Pause		Pause
	Right / >>I / >>		Right
	Right / >>I / >>		>>
	Right / >>I / >>		>>I

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Repeat / ST/Mono		Text
	Repeat		Shift + Text
	EQ		Smart
	P.Bass		Media
	Stop		Stop

