

 




 




 
 







 




 

 






 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power STB		Power
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	I<		I<<
	>I		>>I
	Stop		Stop
	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Video		Format
	Menu		Menu
	i		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Back		Back
	Guide		Guide
	X		Exit
	Vol+		Vol +
	Vol-		Vol -
	↑	 + 	Shift + Up
	↓	 + 	Shift + Down
	CH+		Ch +
	CH-		Ch -
	Mute		Mute
	P < P		Pre Ch
	1		1
	2		2




Originalfernbedienung Ersatzfernbedienung








 
 

 


 


 
 




 




 
 

 
 

PWR On/Off		Power
Epg		Guide
Subt.List		Subt
Opt?		Options
App		Media
Sleep Timer		Sleep
TV		TV/R
Text		Text
Zoom		Eject
Menu		Menu
Menu Up		Up
Menu Left		Left
OK Enter		Ok
Menu Right		Right
Menu Down		Down
Back		Back
CH/Page+		Ch +

Originalfernbedienung Ersatzfernbedienung

Audio		Dual
CH/Page-		Ch -
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
0/10		0
FAV Pref.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		CH/Page+	
Mute		Volume-	
Opt?		Audio	
App		CH/Page-	
Subt.List		1. ?	
Info		2abc	
Video		3def	
Zoom		4ghi	
Menu		5jkl	
Menu Up		6mno	
Menu Left		7pqrm	
OK Enter		8tuv	
Menu Right		9wxyz	
Exit		Guide Pilote	
Menu Down		0/10	
Back		FAV Pref.	
Volume+		Red	