














 

 

 

 

 









 




Originalfernbedienung Ersatzfernbedienung

|   |                  |   |        |
|---|------------------|---|--------|
|    | Power            |    | Power  |
|    | Eject            |    | Eject  |
|    | Timer Rec        |    | AV     |
|    | 1                |    | 1      |
|    | 2                |    | 2      |
|    | 3                |    | 3      |
|    | 4                |    | 4      |
|    | 5                |    | 5      |
|    | 6                |    | 6      |
|    | 7                |    | 7      |
|    | 8                |    | 8      |
|  | 9                |  | 9      |
|  | 0/AV             |  | 0      |
|  | TV/VCR           |  | TV/R   |
|  | Speed SP/LP      |  | Format |
|  | Call             |  | Guide  |
|  | Channel/Tracking |  | Ch +   |

Originalfernbedienung Ersatzfernbedienung

|   |                   |   |       |
|---|-------------------|---|-------|
|    | Channel/Tracking- |    | Ch -  |
|    | Rec/OTR           |    | Rec   |
|    | Pause/Still       |    | Pause |
|    | Up                |    | Up    |
|    | Play              |    | Play  |
|    | Stop              |    | Stop  |
|    | Down              |    | Down  |
|    | Right             |    | Right |
|    | >>                |    | >>    |
|    | <<                |    | <<    |
|    | Left              |    | Left  |
|  | Program           |  | Sleep |
|  | Enter             |  | Ok    |
|  | Menu              |  | Menu  |
|  | Cancel            |  | Exit  |
|  | Index             |  | Info  |
|  | ATR               |  | Red   |





**Originalfernbedienung**   **Ersatzfernbedienung**

|  |               |  |        |
|--|---------------|--|--------|
|  | Clock/Counter |  | Green  |
|  | Zero/Return   |  | Yellow |
|  | Counter Reset |  | Blue   |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |
|  |               |  |        |

**Originalfernbedienung**   **Ersatzfernbedienung**

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

