 

 
 
 







 
 
 








 
 

 



 
 
 
 
 






 



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|---------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Menu |  | Menu |
|  | Top |  | Back |
|  | On Screen |  | Info |
|  | Setup |  | Options |
|  | Up |  | Up |
|  | Down |  | Down |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-------|
|  | Right |  | Right |
|  | Left |  | Left |
|  | Enter/OK |  | Ok |
|  | I<< |  | I<< |
|  | >>I |  | >>I |
|  | Play |  | Play |
|  | Stop |  | Stop |
|  | Pause |  | Pause |
|  | Subtitle |  | Subt |
|  | Audio |  | Dual |
|  | Zoom |  | Eject |
|  | Angle |  | Red |
|  | Repeat |  | Text |
|  | A-B |  | Green |
|  | Scan |  | Media |
|  | Mute |  | Mute |

