




 



 







 

 



 

 













 








 

 




 
 

 
 
 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--/---		Guide
	Swap		Back
	TV/AV		AV
	Game		Smart
	Text		Text

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	P.Std		Format
	S.Std		Dual
	P+		Ch +
	P+		Up
	P-		Ch -
	P-		Down
	V+		Vol +
	V+		Right
	V-		Vol -
	V-		Left
	Red / Picture		Red
	Green / Sound		Green
	Green / Sound		Shift + Dual
	Yellow / Time		Yellow
	Blue / Setup		Blue
	Blue / Setup		Options





Originalfernbedienung

Ersatzfernbedienung

	White / Index		Info
	Reveal		Play
	Zoom		Eject
	East/West		Pause
	Mix		D. Menu
	Lock		3D
	Cancel		Exit
	Hold		Stop
	Subcode		Subt

Originalfernbedienung

Ersatzfernbedienung

