


 





 









 

 
 
 

 
 
 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Auto / Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Back		Back
	Vol+		Vol +
	Vol-		Vol -
	Title		Smart

Originalfernbedienung Ersatzfernbedienung

	Display		Info
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Menu		D. Menu
	LCD Menu		Menu
	DVD Setup		Options
	Input		AV
	P.Mode		Format
	A.Mode		Dual
	Mute		Mute
	Play / Pause		Play
	Stop		Stop





Originalfernbedienung Ersatzfernbedienung

	Slow / Step		Pause
	Audio / Nicam	 + 	Shift + Dual
	Text / <<		Text
	Text / <<		<<
	>> / Mix		>>
	Hold / Goto	 + 	Shift + Stop
	Picture / Subtitle	 + 	Shift + Format
	I<< / Index		I<<
	>>I / Size		>>I
	Reveal / Zoom	 + 	Shift + Eject
	Subpage /	 + 	Shift + Subt
	Picture / Subtitle		Subt
	Red / Program		Red
	Green / Intro		Green
	Yellow / Repeat		Yellow
	Blue / A-B		Blue

Originalfernbedienung Ersatzfernbedienung