 



 

 

 

 







 



 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	Mute		Mute
	Auto		Smart
	Display		Info
	Sleep		Sleep
	TV		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide
	Swap		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Up		Up
	Left		Left
	Menu		Menu
	Menu		Ok
	Right		Right
	Down		Down
	P+		Ch +
	P-		Ch -
	V+		Vol +
	V-		Vol -

