
 

 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Source		AV / Input / RDS
	Home		Shift + Menu /
	e		Smart / List
	Mouse		Info / Angle
	TV / Radio		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Display		Display / Media
	0		0









 
Originalfernbedienung Ersatzfernbedienung

	Recall		Back / Return
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Play/Pause / Timeshift		Play / Slow
	Play/Pause / Timeshift		Pause / Step / Freeze
	Down		Down
	Stop / EPG		Guide / EPG / -/-
	Stop / EPG		Stop / Hold
	Vol +		Vol+
	TXT		Text / Goto
	CH +		CH+ / Page+
	Vol -		Vol-
	Mute		Mute / Dimmer





Originalfernbedienung   Ersatzfernbedienung

	CH -		CH- / Page-
	Mix / Fav. List		Fav / Marker / PC
	Size / Subtitle		Subtitle / EQ
	Cancel / Audio		Audio / Lang I/II
	Record		Rec / Rec Mode
	<< / Index		<< / Tune-
	>> / Hold		>> / Tune+
	<< / Reveal		<< / Preset-
	>>  / Subpage		>>  / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung   Ersatzfernbedienung