





 

 

 

 

 

 



 


 
 
 
 
 

 

 
 

 





 



 
 



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	PBC		Guide
	Stop/Return		Stop
	Play/Pause		Play
	>I</Step		Pause

**Originalfernbedienung    Ersatzfernbedienung**

	Setup		Options
	<< FR/SR		<<
	>> FF/SF		>>
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Sel		Ok
	I<<		I<<
	Display		Info
	>>I		>>I
	Title		List
	Menu		Menu
	Marker		TV/R
	Angle		Red
	Subtitle		Subt
	Audio		Dual





**Originalfernbedienung   Ersatzfernbedienung**

	Zoom	 + 	Shift + Eject
	3D Sound		3D
	Repeat		Text
	Program		Sleep
	Shuffle		Media
	Digest		Yellow
	A-B	 + 	Shift + Play
	Vol+		Vol +
	Vol-		Vol -

**Originalfernbedienung   Ersatzfernbedienung**