

 
 


 










 


 




 


 



 


 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Pause		Pause
	Back		Back
	Menu		Menu
	EPG		Guide
	[i+]		Info
	Format		Format
	Input		AV

Originalfernbedienung Ersatzfernbedienung

	PIP		Shift + 1
	PIP Up		Shift + 2
	PIP Swap		Shift + 3
	Audio		Dual
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Text		Text
	[≡i]		Shift + 4
	[≡...]		Shift + 5
	[≡?]		Shift + 6
	1		1
	2		2
	3		3
	4		4



