



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	[ ]X		Smart
	EQ		Media
	Mute		Mute
	→[ ]←		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide

Originalfernbedienung Ersatzfernbedienung

	[Z]		Format
	Camera		3D
	(Z) ) ) )		Dual
	Time		AV
	Prog		Sleep
	Setup/Mem		Options
	Title		List
	Menu/PBC		Menu
	Return/Exit		Back
	Up		Up
	Down		Down
	Right/FAV+		Right
	Left/FAV-		Left
	Enter		Ok
	Function		Pre Ch
	Tv/Radio		TV/R
	DVD		D. Menu





Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	Play/Pause		Play
	Slow		Pause
	Info		Info
	<</Tuning-		<<
	>>/Tuning+		>>
	I<</Channel-		I<<
	>>I/Channel+		>>I
	Teletext		Text
	EPG		Shift + Guide
	Vol+		Vol +
	Vol-		Vol -
	Red/Repeat		Red
	Green/A-B		Green
	Yellow/Zoom		Yellow
	Blue/Clear		Blue

Originalfernbedienung Ersatzfernbedienung


