


 



 
 



 
 



 

 

 

 

 

 





 




Originalfernbedienung    Ersatzfernbedienung

|   |               |  |            |
|---|---------------|--|------------|
|    | Power         |     | Power      |
|    | i             |     | Info       |
|    | Input Select  |     | AV         |
|    | Picture Size  |     | Format     |
|    | 1             |     | 1          |
|    | 2             |     | 2          |
|    | 3             |     | 3          |
|    | 4             |     | 4          |
|    | 5             |     | 5          |
|    | 6             |     | 6          |
|    | 7             |     | 7          |
|  | 8             |   | 8          |
|  | 9             |   | 9          |
|  | 0             |   | 0          |
|  | Timer         |  | Shift + AV |
|  | Mute          |   | Mute       |
|  | [≡o] [≡o]/P↔P |   | Back       |

Originalfernbedienung    Ersatzfernbedienung

|   |               |   |         |
|---|---------------|---|---------|
|    | Audio I/II    |    | Dual    |
|    | [≡?]          |    | Options |
|    | [≡◇]          |    | 3D      |
|    | Menu          |    | Menu    |
|    | [≡]           |    | Text    |
|    | P+            |    | Ch +    |
|    | Up            |    | Up      |
|    | P-            |    | Ch -    |
|    | Down          |    | Down    |
|    | Vol+          |    | Vol +   |
|    | Right         |    | Right   |
|  | Vol-          |  | Vol -   |
|  | Left          |  | Left    |
|  | Enter/CH List |  | Ok      |
|  | Exit          |  | Exit    |
|  | Freeze / [≡+] |  | Pre Ch  |
|  | Red           |  | Red     |



