











 

 






 



 




 
















 





 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-		Guide
	Recall		Back
	Source		AV
	Display		Info
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	P.Mode		Format
	S.Mode		Dual
	CH+		Ch +
	CH-		Ch -
	Input		Shift + AV
	Fav / Angle		Pre Ch
	Zoom		Eject
	Sleep		Sleep
	Red		Red





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Green / 3D		Green				
	Green / 3D		3D				
	Yellow		Yellow				
	Blue		Blue				
	Play / Pause		Play				
	Play / Pause		Pause				
	FR		<<				
	FF		>>				
	Stop		Stop				
	Prev		I<<				
	Next		>>I				
	Media		Media				
	Keyboard		Text				
	PC		D. Menu				
	Refresh		List				
	Search		TV/R				
	Home		Smart				

