


















Originalfernbedienung Ersatzfernbedienung

POWER		Power
REPEAT		Green / APP / Repeat
A-B		Yellow / YouTube / Repeat
AUDIO		Audio / Lang I/II
SUBTITLE		Subtitle / EQ
MENU		Menu / Home
SELECT/ENTER		OK
LEFT		Left
RIGHT		Right
DOWN		Down
UP		Up
ZOOM		Zoom / Size
<</SCAN		<< / Tune-
>>/SCAN		>> / Tune+
PLAY		Play / Slow
STOP		Stop / Hold
>>I/SKIP		>>I / Preset+

Originalfernbedienung Ersatzfernbedienung

I<</SKIP		I<< / Preset-
PAUSE		Pause / Step / Freeze
<I/SLOW		CH- / Page-
>I/SLOW		CH+ / Page+
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
CLEAR		Exit / Cancel / Clear
10 +		Guide / EPG / -/-
PAGE		Sleep / Timer



