



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV / Input / RDS
	-/--		Guide / EPG / -/--
	Tv		TV/Radio /
	TX		Text / Goto
	Sel		OK

Originalfernbedienung Ersatzfernbedienung

	→ ←		Smart / List
	P+		CH+ / Page+
	P-		CH- / Page-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol+
	Vol-		Vol-
	Info		Info / Angle
	Timer		Sleep / Timer
	Syst		Setup / OPT /
	Store		Zoom / Size
	Menu		Menu / Home
	P100		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Clock/Sub		Subtitle / EQ
	Update		Back / Return
	Mix		Picture / Format
	Double		D.Menu / Top
	Reveal		Display / Media
	Hold		Stop / Hold
	Stereo On/Off		Audio / Lang I/II
	A-B Mono		Sound / Title
	PS ↔		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

