

 



 

 
 

 

 
 

 

 

 
 
 


 




Originalfernbedienung Ersatzfernbedienung

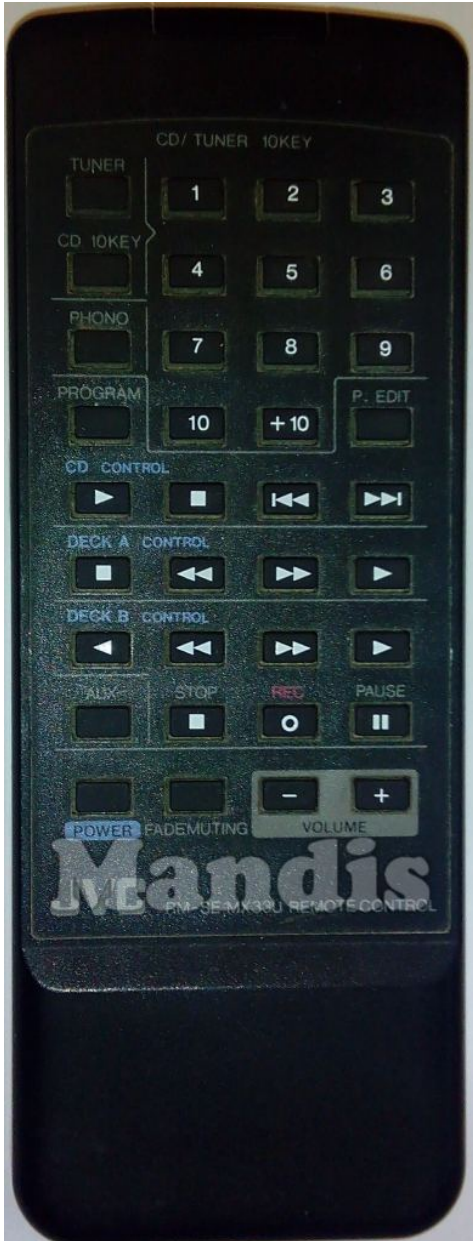 
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		Guide / EPG / -/--
	+10		Fav / Marker / PC
	Tuner		0
	1 CD 10Key		Shift + 1
	2 CD 10Key		Shift + 2
	3 CD 10Key		Shift + 3
	4 CD 10Key		Shift + 4

Originalfernbedienung Ersatzfernbedienung

	5 CD 10Key		Shift + 5
	6 CD 10Key		Shift + 6
	7 CD 10Key		Shift + 7
	8 CD 10Key		Shift + 8
	9 CD 10Key		Shift + 9
	10 CD 10Key		Shift + Guide / EPG / -/--
	+10 CD 10Key		Shift + Fav / Marker / PC
	Phono		Exit / Cancel / Clear
	Program		TV/Radio /
	Fade Muting		Mute / Dimmer
	Vol-		Vol-
	Vol+		Vol+
	P. Edit		Menu / Home
	AUX		AV / Input / RDS
	Stop Deck B		Shift + Stop /
	< Deck B Control		Shift + Pause / Step /
	> Deck B Control		Shift + Play /

Slow





Originalfernbedienung	Ersatzfernbedienung
 >> Deck B	 >>I / Preset+
 << Deck B	 I<< / Preset-
 Pause Deck B Control	 Info / Angle
 >Deck A	 Play / Slow
 Stop Deck A	 Stop / Hold
 Rec Deck B	 Rec / Rec Mode
 << Deck A	 << / Tune-
 >> Deck A	 >> / Tune+
 > CD Control	 Right
 Stop CD Control	 Left
 I<< CD Control	 Down
 >>I CD Control	 Up

Originalfernbedienung	Ersatzfernbedienung

