 

 


 
 

 
 




 


 

 





























**Originalfernbedienung Ersatzfernbedienung**

	On/Standby		Power
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Preset		Zoom / Size
	Clock		Shift + Sleep / Timer
	Timer		AV / Input / RDS
	Repeat		Green / APP / Repeat
	Random		Blue / Prime Video / Random

**Originalfernbedienung Ersatzfernbedienung**

	Intro		TV/Radio /
	EQ		Subtitle / EQ
	Mono/ST		Audio / Lang I/II
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer
	I<</<</Tuning		<< / Tune-
	>>/>>/Tuning		>> / Tune+
	Folder-		CH- / Page-
	Folder+		CH+ / Page+
	Preset Up		>>I / Preset+
	Preset Down		I<< / Preset-
	Vol+		Vol+
	Vol-		Vol-
	Enter		OK
	CD		Shift + 3
	USB		Shift + 8
	Tuner/Dab		Shift + 6





**Originalfernbedienung Ersatzfernbedienung**

	Audio In	+ <b>7</b>	Shift + 7
	Display CD/USB		Info / Angle
	Stop CD/USB		Stop / Hold
	Play/Pause		Play / Slow
	Scan DAB		Display / Media
	Menu DAB		Menu / Home
	Display DAB	+	Shift + Info / Angle
	Scan Radio		Smart / List
	Display Radio		Setup / OPT /

**Originalfernbedienung Ersatzfernbedienung**