







 



































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Return		Back / Return
	PR+		CH+ / Page+
	>>I		>>I / Preset+
	I<<<		I<<< / Preset-
	PR-		CH- / Page-
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	OK		OK
	Red		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Sound		Sound / Title
	Green		Green / APP / Repeat
	List		Shift + Smart / List
	Yellow		Yellow / YouTube / Repeat
	Info		Info / Angle
	Mosaic		Smart / List
	Blue		Blue / Prime Video / Random
	Violet		Display / Media
	Text		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



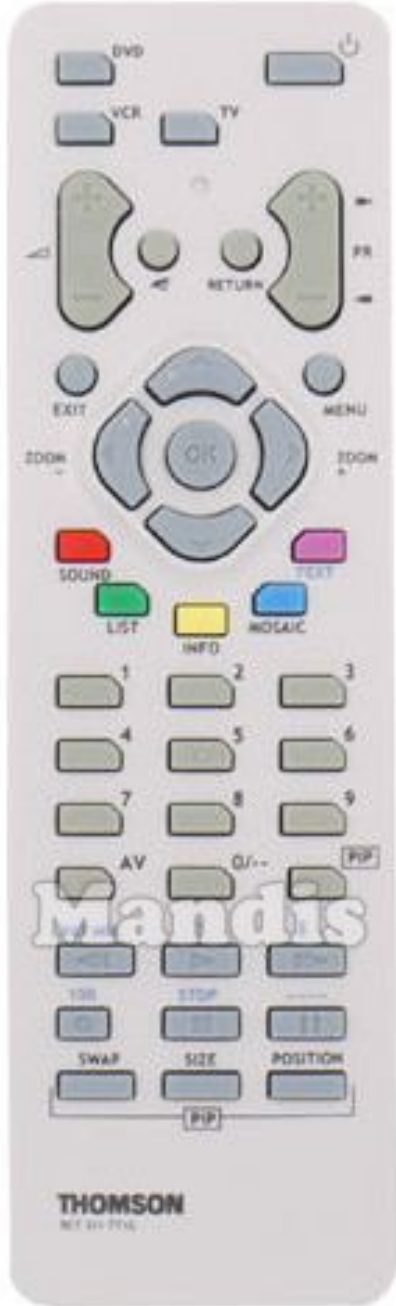 


Originalfernbedienung Ersatzfernbedienung





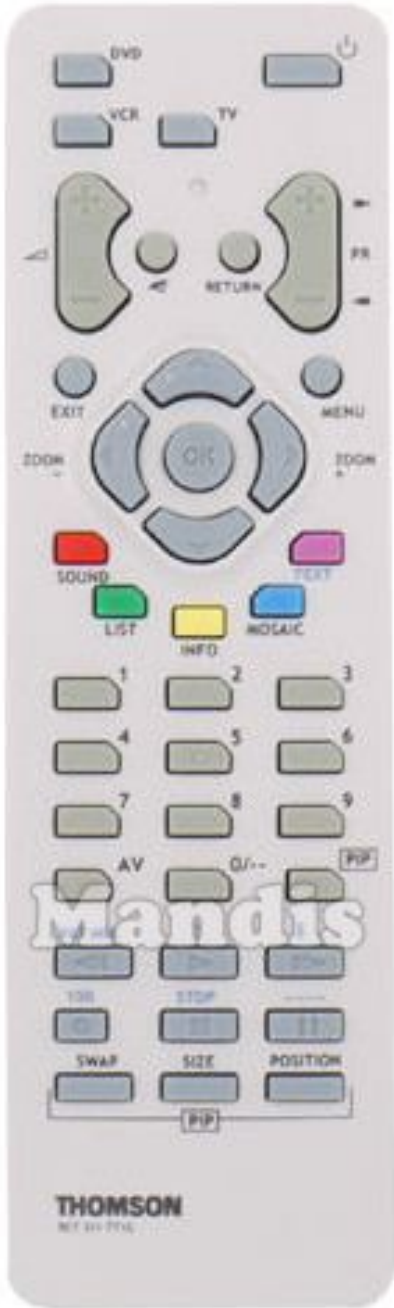 



 





 



















	9		9
	0/-/-		0
	AV		AV / Input / RDS
	PIP		Zoom / Size
<</Pat-Mix button"/>	<</Pat-Mix		<< / Tune-
	Play/?		Play / Slow
	>>		>> / Tune+
	Rec/100		Rec / Rec Mode
	Stop		Stop / Hold
	Pause/----		Pause / Step / Freeze
	Swap PIP		Setup / OPT /
	Size PIP		Picture / Format
	Position PIP		TV/Radio /

Originalfernbedienung Ersatzfernbedienung
































**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Return		Back / Return
	PR+		CH+ / Page+
	>>I		>>I / Preset+
	PR-		CH- / Page-
	I<<		I<< / Preset-
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	OK		OK
	Red		Red / Netflix / Search

**Originalfernbedienung    Ersatzfernbedienung**

	Sound		Sound / Title
	Green		Green / APP / Repeat
	List		Shift + Smart / List
	Info		Info / Angle
	Yellow		Yellow / YouTube / Repeat
	Mosaic		Smart / List
	Blue		Blue / Prime Video / Random
	Violet		Display / Media
	Text		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8



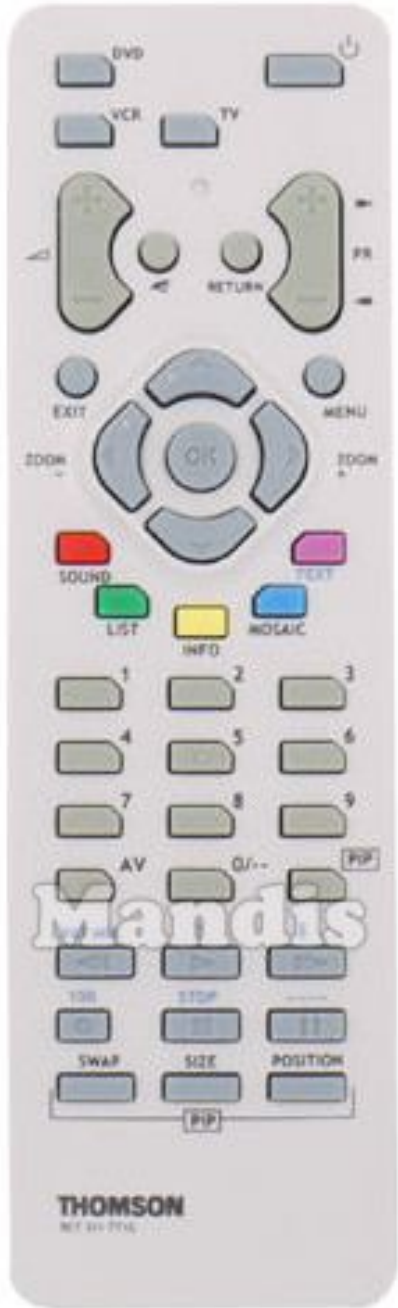


**Originalfernbedienung Ersatzfernbedienung**





 


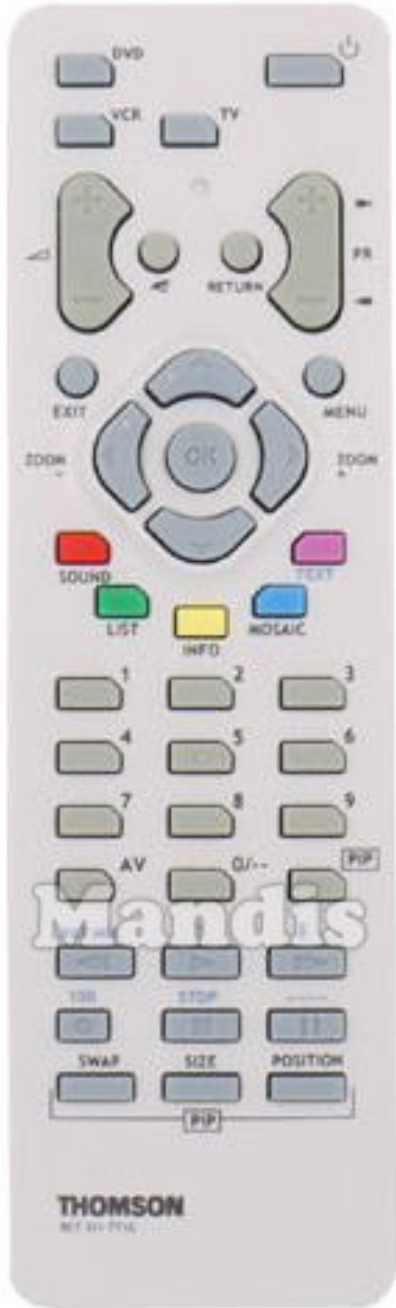






 

 








 

 






	9		9
	0/-/-		0
	AV		AV / Input / RDS
	PIP		Zoom / Size
	<</Pat-Mix		<< / Tune-
	Play/?		Play / Slow
	>>		>> / Tune+
	Rec/100		Rec / Rec Mode
	Stop		Stop / Hold
	Pause/----		Pause / Step / Freeze
	Swap PIP		Setup / OPT /
	Size PIP		Picture / Format
	Position PIP		TV/Radio /

**Originalfernbedienung Ersatzfernbedienung**




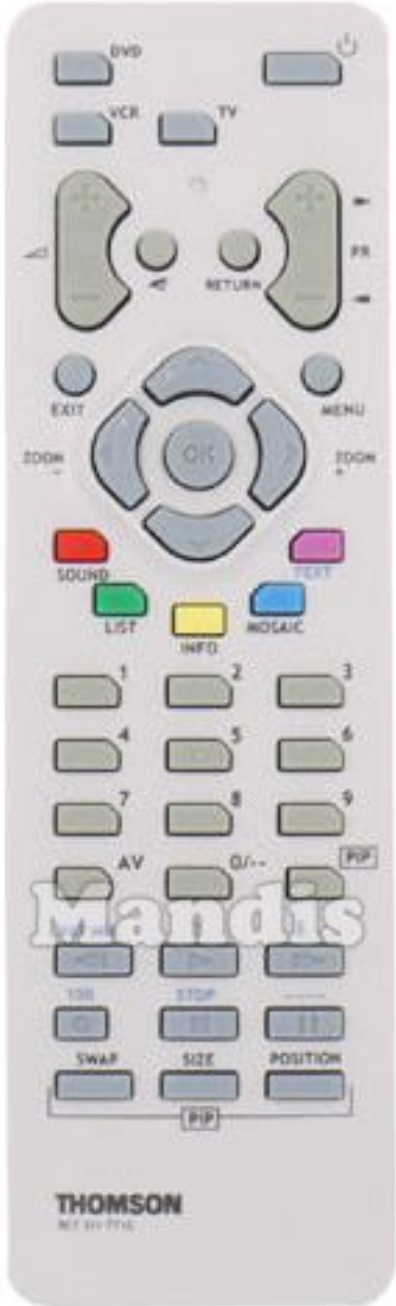 
**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Return		Back / Return
	PR+		CH+ / Page+
	>>		>>  / Preset+
	<<		<< / Preset-
	PR-		CH- / Page-
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	OK		OK
	Red		Red / Netflix / Search

**Originalfernbedienung Ersatzfernbedienung**

	Sound		Sound / Title
	List		Shift + Smart / List
	Green		Green / APP / Repeat
	Info		Info / Angle
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Mosaic		Smart / List
	Violet		Display / Media
	Text		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





**Originalfernbedienung   Ersatzfernbedienung**

	9		9
	0/-/-		0
	AV		AV / Input / RDS
	PIP		Zoom / Size
	<</Pat-Mix		<< / Tune-
	Play/?		Play / Slow
	>>		>> / Tune+
	Rec/100		Rec / Rec Mode
	Stop		Stop / Hold
	Pause/----		Pause / Step / Freeze
	Size PIP		Picture / Format
	Position PIP		TV/Radio /

**Originalfernbedienung   Ersatzfernbedienung**