



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv		Shift + Power
	AV Input Tv		AV / Input / RDS
	Vol+ Tv		Vol+
	Vol- Tv		Vol-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel		Shift + Exit / Cancel / Clear
	Audio		Audio / Lang I/II


Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Status		TV/Radio /
	PIP		Zoom / Size
	Internet		Smart / List
	<< Search		<< / Tune-
	Play		Play / Slow
	Search >>		>> / Tune+
	I<< Skip		I<< / Preset-
	Pause		Pause / Step / Freeze
	Skip >>I		>>I / Preset+
	Stop		Stop / Hold
	Pop Up Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Option		Setup / OPT /
	Return		Back / Return
	Top Menu		D.Menu / Top
	Netflix		Shift + Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung		
	Home		Shift + Menu /
	Up		Up
	Down		Down
	Left		Left
	Right/l>		Right
	OK		OK
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

