
































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text / Goto
	PRE-CH		Fav / Marker / PC
	Mute		Mute / Dimmer
	CH LIST		Smart / List
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Ch+		CH+ / Page+
	Ch-		CH- / Page-
	Settings		Setup / OPT /
	Home		Menu / Home
	Guide		Guide / EPG / -/-
	Info		Info / Angle
	E-Manual		D.Menu / Top
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	Return		Back / Return
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Pic Size		Zoom / Size
	Picture		Picture / Format
	Ad/Subt.		Subtitle / EQ
	Stop		Stop / Hold
	<</ <<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>/>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

