




























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV / Radio		TV/Radio /
	TV / Sat		Display / Media
	Menu		Menu / Home
	EPG		Guide / EPG / -/--
	Info		Info / Angle

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Down / CH-		Down
	Down / CH-		CH- / Page-
	OK		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	Left / Vol-		Left
	Left / Vol-		Vol-
	Group		Smart / List
	Pause		Pause / Step / Freeze
	Color		Picture / Format
	Page+		Shift + CH+ /
	Page-		Shift + CH- /
	Page+		>>  / Preset+
	Page-		<< / Preset-



