




Originalfernbedienung	Ersatzfernbedienung
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	AV / Input / RDS
	Setup / OPT /
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat

Originalfernbedienung	Ersatzfernbedienung
	Blue / Prime Video / Random
	Up
	Left
	OK
	Right
	Down
	Guide / EPG / -/--
	Back / Return
	Exit / Cancel / Clear
	Info / Angle
	TV/Radio /
	Menu / Home
	CH+ / Page+
	CH- / Page-
	Vol+
	Vol-
	Sleep / Timer





Originalfernbedienung Ersatzfernbedienung

[illegible]

Originalfernbedienung	Ersatzfernbedienung
<p>1. Drücken Sie die Taste ON/OFF, um das Gerät einzuschalten.</p> <p>2. Drücken Sie die Taste CH, um den Kanal zu wählen.</p> <p>3. Drücken Sie die Taste POWER, um das Gerät auszuschalten.</p>	<p>1. Drücken Sie die Taste ON/OFF, um das Gerät einzuschalten.</p> <p>2. Drücken Sie die Taste CH, um den Kanal zu wählen.</p> <p>3. Drücken Sie die Taste POWER, um das Gerät auszuschalten.</p>

