

















 


 










 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sky		D.Menu / Top
	box office		Display / Media
	services		Menu / Home
	tv guide		Guide / EPG / -/--
	Interactive		Smart / List
	i		Info / Angle
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Select		OK
	text		Text / Goto
	back up		Back / Return
	help		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	pause		Pause / Step / Freeze
	play		Play / Slow
	>>		>> / Tune+
	R		Rec / Rec Mode
	Stop		Stop / Hold
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8 tuv	8	USB 8	8
9 wxyz	9	BLUETOOTH 9	9
0	0	HDMI - BAT 0	0

Originalfernbedienung Ersatzfernbedienung

