



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------------|--|------------------|
| | Open/Close | | Eject / Surround |
| | Standby Tv | | Shift + Power |
| | Standby | | Power |
| | 1 Tv | | Shift + 1 |
| | 2 Tv | | Shift + 2 |
| | 2 | | 2 |
| | 3 Tv | | Shift + 3 |
| | 1 | | 1 |
| | 4 Tv | | Shift + 4 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 Tv | | Shift + 5 |
| | 5 | | 5 |
| | 6 Tv | | Shift + 6 |
| | 7 Tv | | Shift + 7 |
| | 6 | | 6 |
| | 8 Tv | | Shift + 8 |

 

 

 

 

 

 

 





 



 



 

 

 

 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------------|--|----------------------------|
| | 7 | | 7 |
| | 9 Tv | | Shift + 9 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 Tv | | Shift + 0 |
| | 0 | | 0 |
| | -/-- Tv | | Guide / EPG / -/-- |
| | 10 | | Shift + Guide / EPG / -/-- |
| | +10 | | Fav / Marker / PC |
| | Return | | Back / Return |
| | Page | | Setup / OPT / |
| | Title/Group | | Info / Angle |
| | Tv/Video | | Shift + TV/Radio / Program |
| | Cancel | | Exit / Cancel / Clear |
| | Top Menu | | D.Menu / Top |
| | Choice | | TV/Radio / |
| | Menu | | Menu / Home |

 
 
 
 
 





 


















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------------------------|
|  | CH+ Tv |  | Shift + CH+ / |
|  | Up |  | Up |
|  | CH- Tv |  | Shift + CH- / |
|  | Vol- Tv |  | Shift + Vol- |
|  | Down |  | Down |
|  | Vol+ Tv |  | Shift + Vol+ |
|  | Right |  | Right |
|  | Enter |  | OK |
|  | Left |  | Left |
|  | I<</Previous |  | I<< / Preset- |
|  | On Screen |  | Display / Media |
|  | >>I/Next |  | >>I / Preset+ |
|  | Stop/Clear |  | Stop / Hold |
|  | Play/Select |  | Play / Slow |
|  | Pause/Strobe |  | Pause / Step / Freeze |
|  | <</Slow- |  | << / Tune- |
|  | >>/Slow+ |  | >> / Tune+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------------|---|-------------------------|
|  | Repeat |  | Green / APP / Repeat |
|  | Subtitle |  | Subtitle / EQ |
|  | Audio/fs/Rate |  | Audio / Lang I/II |
|  | VFP/Progressive Scan |  | Picture / Format |
|  | Digest |  | AV / Input / RDS |
|  | Angle |  | Shift + Info / Angle |
|  | Zoom- |  | CH- / Page- |
|  | Zoom+ |  | CH+ / Page+ |
|  | 3D Phonic |  | Zoom / Size |
|  | PAL/NTSC |  | Sleep / Timer |
|  | Amp Vol- |  | Vol- |
|  | Amp Vol+ |  | Vol+ |
| | Muting Tv |  | Mute / Dimmer |

