






 

 



















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|------------------------|
|  | Power |  | Power |
|  | VGA |  | Red / Netflix / Search |
|  | AV1 |  | Shift + 1 |
|  | AV2 |  | Shift + 2 |
|  | AV3 |  | Shift + 3 |
|  | Brightness+ |  | >> / Tune+ |
|  | Brightness- |  | << / Tune- |
|  | Contrast+ |  | >>I / Preset+ |
|  | Contrast- |  | I<< / Preset- |
|  | Zoom On/Off |  | Zoom / Size |
|  | Zoom In |  | Sleep / Timer |
|  | Zoom Out |  | TV/Radio / |
|  | Menu |  | Menu / Home |
|  | OK |  | OK |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Left |  | Left |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|------------------|
|  | Right |  | Right |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | Mute |  | Mute / Dimmer |
|  | CH/PR+ |  | CH+ / Page+ |
|  | CH/PR- |  | CH- / Page- |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | AV Mute |  | AV / Input / RDS |



