




 


 



 

 

 
 
 

 
 
 
 

 
 

 




Originalfernbedienung	Ersatzfernbedienung
 Standby	 Power
 Computer	 Comp / Video
 Video	 Shift + Comp / Video
 Menu	 Menu
 Keystone	 Shift + Up
 Up	 Up
 Down	 Down
 Vol-	 Vol - / Page -
 Left	 Left
 Vol+	 Vol + / Page +
 Right	 Right
 Select	 Enter
 Lampcontrol	 Shift + Power
 C.Zoom Up	 + / Play
 C.Zoom Down	 - / Stop
 Auto PC	 Auto
 Image	 Eco / Aspect

Originalfernbedienung	Ersatzfernbedienung
 Freeze	 Freeze / Timer
 P-Timer	 Shift + Freeze / Timer
 No Show	 Mode
 Mute	 Blank / Mute

