







 





















































Originalfernbedienung Ersatzfernbedienung

Shuffle	 + 	Shift + Blue / Prime
C/CH		Picture / Format
Auto/Track		Smart / List
Play/Back		Text / Goto
DVD/TV		AV / Input / RDS
Echo+	 + 	Shift + Vol+
Echo-	 + 	Shift + Vol-
Slow Down		CH- / Page-
Slow Up		CH+ / Page+
Karaoke/Step	 + 	Shift + Pause / Step /
Play		Play / Slow
Repeat/1/All		Green / APP / Repeat
Progr.		TV/Radio /
2		2
3		3
4		4
5		5

Originalfernbedienung Ersatzfernbedienung

6		6
7		7
8		8
9		9
+10		Guide / EPG / -/-
0		0
Record		Rec / Rec Mode
Rewind		<< / Tune-
1		1
F.Forward		>> / Tune+
Info		Info / Angle
Timer		Sleep / Timer
Video	 + 	Shift + 4
Angle	 + 	Shift + Info / Angle
Lang		Audio / Lang I/II
Random		Blue / Prime Video / Random
Menu Up		Up



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Audio Off	 Mute / Dimmer	Volume-	 Vol-
Stop	 Stop / Hold	Top Menu	 D.Menu / Top
Pause	 Pause / Step / Freeze	Prev.	 I<< / Preset-
Subt.	 Subtitle / EQ		
Rep/A-B	 Yellow / YouTube / Repeat		
Title	 Sound / Title		
Zoom	 Zoom / Size		
Menu	 Menu / Home		
On/Off	 Power		
Display	 Display / Media		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Return	 Back / Return		
Menu Down	 Down		
Volume+	 Vol+		
Next	 >>I / Preset+		

